

Key Features



- 0.1 ~ 1.0 GHz, 50 Ohm Impedance
- 0.90 dB Noise Figure
- 19 dB Gain
- 1.35:1 VSWR
- 10 dBm P_{1dB}
- Precision Machined Housing
- Single DC Power Supply
- Meet MIL-STD-202g

Applications

- VHF & UHF
- · Receiver Amplifiers
- RF Bench Tests
- Mobile Base Station Applications



Absolute Maximum Ratings

Parameters	Units	Ratings
DC Power Supply Voltage	V	-0.5,32
RF Input CW Power	dBm	10
Storage Temperature	°C	-40 ~ +85
Operating Temperature	°C	-40 ~ +85

Operation of this device beyond any one of these parameters may cause permanent damage.


Specifications

Summary of the key electrical specifications at 25°C

Index	Testing Item	Symbol	Test Constraints	Min	Nom	Max	Unit
1	Frequency Range	BW	50 Ohm Impedance	0.1		1.0	GHz
2	Gain	S ₂₁	0.1 – 1.0 GHz	17	19	23	dB
3	Gain Variation	ΔG	0.1 – 1.0 GHz		+/- 1.0		dB
4	VSWR	SWRi	0.1 – 1.0 GHz all RF ports		1.35:1	1.5:1	Ratio
5	Reverse Isolation	S ₁₂	0.1 – 1.0 GHz		25		dB
6	Noise Figure	NF	0.1 – 1.0 GHz		0.9	1.3	dB
7	Output Power 1dB Compression Point	P _{1dB}	0.1 – 1.0 GHz	8	10		dBm
8	Output-Third-Order Interception Point	IP ₃	Two-Tone, P _{out} = 0 dBm each, 1 MHz separation	20	22		dBm
9	Current Consumption	I _{dd}	V _{dd} = +12.0 V		25		mA
10	Power Supply Operating Voltage	V_{dd}		+8	+12	+16	V
11	Operating Temperature	T _o		-40		+85	°C
12	Thermal Resistance	R _{th c}	Junction to case			215	°C/W


Functional Block Diagram

Outline, IP-3 Housing

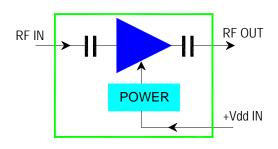

Ordering Information


Model	Connectors			
Number	IN	OUT		
ILA010100A	SMA Female	SMA Female		

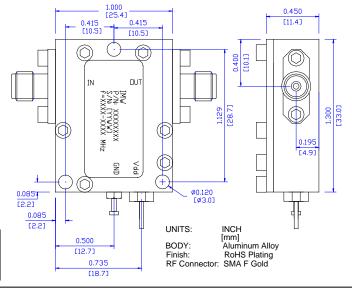



E-mail: sales@infinitimw.com


Specifications and information are subject to change without notice.

Typical Data

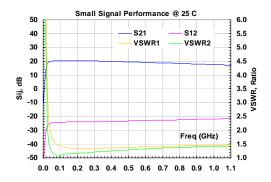

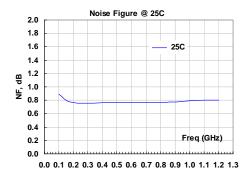

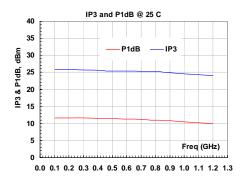

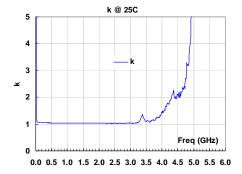

Application Notes:

A. SMA Torque Wrench Selection

Always use a torque wrench with $5 \sim 6$ inch-lb coupling torque setting for mating the SMA cables to the amplifier. Never use torque more than 8 inch-lb wrench for tightening the mating cable to the connector. Otherwise, the permanent damage will occur to the SMA connectors of the amplifier. 8710-1582 (5 inch-lb) is one of the ideal torque wrench choice from Agilent Technology.

B. Mounting the Amplifier

Use three pieces of #2-56 with longer than 9/16" screws for mounting the amplifier on a metal-based chase. Flat and spring washers are needed to prevent the screw loosening during the shock and vibration. Always use the appropriate torque setting of the power screwdriver to mount them.
