Key Features



- Wide Band, 10 MHz ~ 1000 MHz
- Low Insertion Loss, 0.50 dB Typ.
- High Isolation, 20 dB min
- Excellent VSWR 1.22:1 Typ.
- 0 Degree
- · Precision Machined Housing
- Single DC Power Supply
- Meet MIL-STD-202g

Applications

- IP₃ Measurement
- Land radio
- · RF Bench Tests
- Mobile Base Station Applications



Absolute Maximum Ratings

Parameters	Units	Ratings
Input Power(at Port 1)	dBm	20
Storage Temperature	°C	-40 ~ +85
Operating Temperature	°C	-40 ~ +85


Operation of this device beyond any one of these parameters may cause permanent damage.

Specifications


Summary of the key electrical specifications at 25°C

Index	Testing Item	Symbol	Test Constraints	Min	Тур	Max	Unit
1	Frequency Range	BW	50 Ohm Impedance	10		1000	MHz
2	Insertion Loss	S ₂₁ , S ₃₁	10 - 1000 MHz, above 3 dB		0.5	1.2	dB
3	VSWR	SWRi	10 - 1000 MHz, all Ports		1.22:1	1.5:1	Ratio
4	Isolation	S ₂₃	10 - 1000 MHz, 50 Ohm Load at Port C		20		dB
5	Amplitude Unbalance	S ₂₁ - S ₃₁	10 – 1000 MHz		0.2	1.0	dB
6	Phase Unbalance	S ₂₁ - S ₃₁	10 – 1000 MHz		1	5	Deg
7	Power Handling	P _{MAX}	10 – 1000 MHz, CW			20.0	dBm
8	Operating Temperature	To		-40		+85	°C

Functional Block Diagram

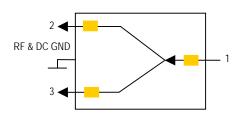

Outline, IP-1 Housing

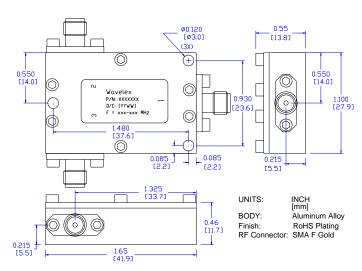



Ordering Information


Model	Connectors			
Number	IN	OUT		
IPD10A	SMA Female	SMA Female		


Specifications and information are subject to change without notice.

Typical Data

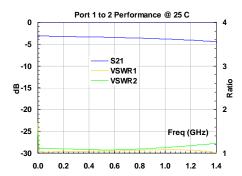

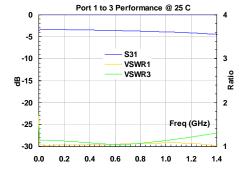

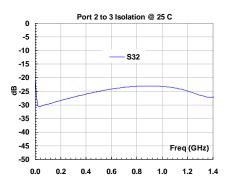

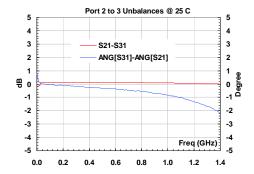

Application Notes:

A. SMA Torque Wrench Selection

Always use a torque wrench with $5 \sim 6$ inch-lb coupling torque setting for mating the SMA cables to the divider/combiner. Never use torque more than 8 inch-lb wrench for tightening the mating cable to the connector. Otherwise, the permanent damage will occur to the SMA connectors. 8710-1582 (5 inch-lb) is one of the ideal torque wrench choice from Agilent Technology.

B. Mounting the Power Divider/Combiner

Use three pieces of #2-56 with longer than 9/16" screws for mounting the divider/combiner on a metal-based chase. Flat and spring washers are needed to prevent the screw loosening during the shock and vibration. Always use the appropriate torque setting of the power screwdriver to mount them.

Specifications and information are subject to change without notice.

Website: www.infinitimw.com