Key Features



- Wide Band, 1.0 ~ 4.0 GHz
- Low Insertion Loss, 0.50 dB Typ.
- High Isolation, 18 dB min
- Excellent VSWR 1.22:1 Typ.
- 0 Degree Wilkinson Type
- Precision Machined Housing
- Single DC Power Supply
- Meet MIL-STD-202g

Applications

- LTE
- · Land Radio
- · RF Bench Tests
- Mobile Base Station Applications



Absolute Maximum Ratings

Parameters	Units	Ratings
Input Power(at Port 1)	dBm	20
Storage Temperature	င့	-40 ~ +85
Operating Temperature	°C	-40 ~ +85


Operation of this device beyond any one of these parameters may cause permanent damage.

Specifications


Summary of the key electrical specifications at 25°C

Index	Testing Item	Symbol	Test Constraints	Min	Тур	Max	Unit
1	Frequency Range	BW	50 Ohm Impedance	1.0		4.0	GHz
2	Insertion Loss	S ₂₁ , S ₃₁	1.0 – 4.0 GHz, above 3 dB		0.5	1.2	dB
3	VSWR	SWRi	1.0 – 4.0 GHz, all Ports		1.22:1	1.5:1	Ratio
4	Isolation	S ₂₃	1.0 – 4.0 GHz, 50 Ohm Load at Port C	18			dB
5	Amplitude Unbalance	S ₂₁ - S ₃₁	1.0 – 4.0 GHz		0.2	1.0	dB
6	Phase Unbalance	S ₂₁ - S ₃₁	1.0 – 4.0 GHz		1	5	Deg
7	Power Handling	P _{MAX}	1.0 – 4.0 GHz, CW			20.0	dBm
8	Operating Temperature	T _o		-40		+85	°C

Functional Block Diagram

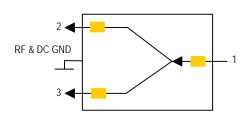

Outline, IP-1 Housing

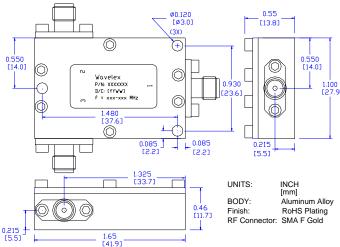



Ordering Information


Model	Connectors		
Number	IN	OUT	
IPD40A	SMA Female	SMA Female	


Specifications and information are subject to change without notice.

Typical Data

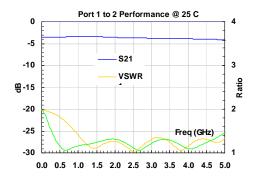

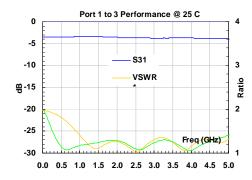

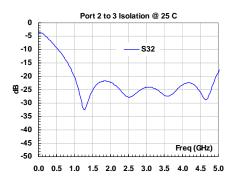

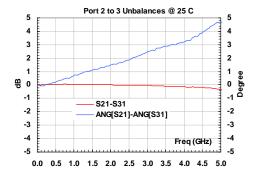

Application Notes:

A. SMA Torque Wrench Selection

Always use a torque wrench with 5 ~ 6 inch-lb coupling torque setting for mating the SMA cables to the divider/combiner. Never use torque more than 8 inch-lb wrench for tightening the mating cable to the connector. Otherwise, the permanent damage will occur to the SMA connectors. 8710-1582 (5 inch-lb) is one of the ideal torque wrench choice from Agilent Technology.

B. Mounting the Power Divider/Combiner

Use three pieces of #2-56 with longer than 9/16" screws for mounting the divider/combiner on a metal-based chase. Flat and spring washers are needed to prevent the screw loosening during the shock and vibration. Always use the appropriate torque setting of the power screwdriver to mount them.

Specifications and information are subject to change without notice.