Key Features



- 0.2 ~ 4.0 GHz, Wide Bandwidth
- 1.2 dB Noise Figure
- 29 dB Gain
- 1.5:1 VSWR
- 13.0 dBm P_{1dB}
- · Precision Machined Housing
- Single DC Power Supply

Applications

- · Cellular, GPS, DCS, PCS, 3G
- · Receiver amplifiers
- · RF bench tests
- Mobile base station



Absolute Maximum Ratings

Parameters	Units	its Ratings	
DC Power Supply Voltage	٧	-0.5,32	
RF Input CW Power	dBm	10	
Storage Temperature	°C	-40 ~ +85	
Operating Temperature	ç	-40 ~ +85	

Operation of this device beyond any one of these parameters may cause permanent damage.


Specifications

Summary of the key electrical specifications at 25°C

Index	Testing Item	Symbol	Test Constraints	Min	Nom	Max	Unit
1	Frequency Range	BW	50 Ohm Impedance	200		4000	MHz
2	Gain	S ₂₁	200 – 4000 MHz	27	29	31	dB
3	Gain Variation	ΔG	200 – 4000 MHz		+/- 0.8		dB
4	VSWR	SWRi	200 – 4000 MHz all RF ports		1.5:1	1.8:1	Ratio
5	Reverse Isolation	S ₁₂	200 – 4000 MHz		42		dB
6	Noise Figure	NF	200 – 4000 MHz		1.2	1.5	dB
7	Output Power 1dB Compression Point	P _{1dB}	200 – 4000 MHz	12	13		dBm
8	Output-Third-Order Interception Point	IP ₃	Two-Tone, P _{out} = 0 dBm each, 1 MHz Separation	22	26		dBm
9	Current Consumption	I _{dd}	$V_{dd} = +12.0 \text{ V}$		54		mA
10	Power Supply Operating Voltage	V_{dd}		+7	+12	+16	V
11	Operating Temperature	T _o		-40		+85	°C
12	Thermal Resistance	R _{th,c}	Junction to case			215	°C/W


Functional Block Diagram

Outline, IP-3 Housing

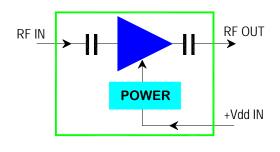



Ordering Information


Model	Connectors			
Number	IN	OUT		
ILA020400A	SMA Female	SMA Female		

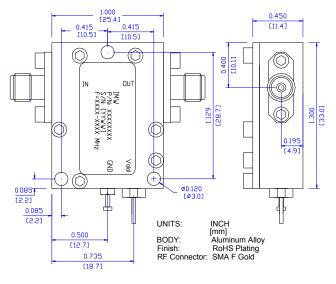


Typical Data

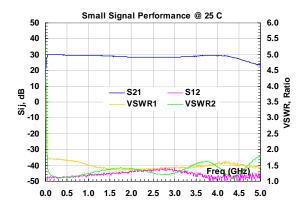

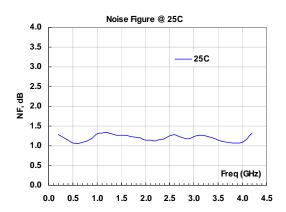

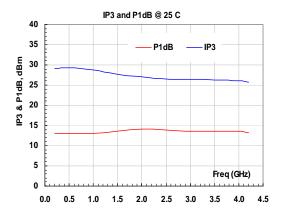

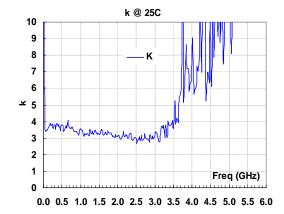

Application Notes:

A. SMA Torque Wrench Selection

Always use a torque wrench with $5 \sim 6$ inch-lb coupling torque setting for mating the SMA cables to the amplifier. Never use torque more than 8 inch-lb wrench for tightening the mating cable to the connector. Otherwise, the permanent damage will occur to the SMA connectors of the amplifier. 8710-1582 (5 inch-lb) is one of the ideal torque wrench choice from Agilent Technology.

B. Mounting the Amplifier

Use three pieces of #2-56 with longer than 9/16" screws for mounting the amplifier on a metal-based chase. Flat and spring washers are needed to prevent the screw loosening during the shock and vibration. Always use the appropriate torque setting of the power screwdriver to mount them.
